Easy-to-install rings slide in and out! Lifetime guarantee.

Removal:

1. Insert screwdriver to the right of the lever near the pivot point, compress the spring in the plate.

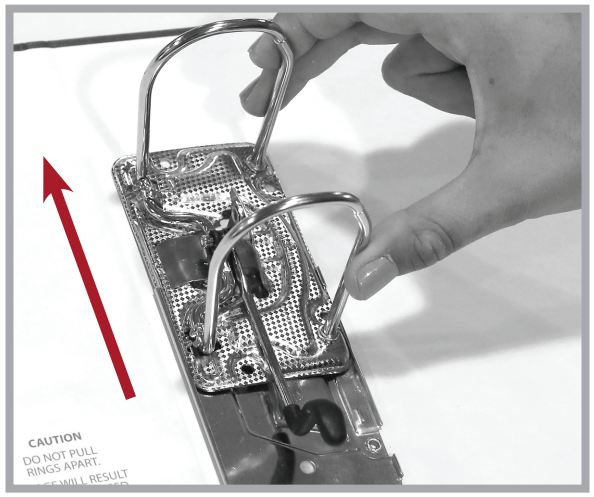

2. Firmly push mechanism over catch in direction shown.

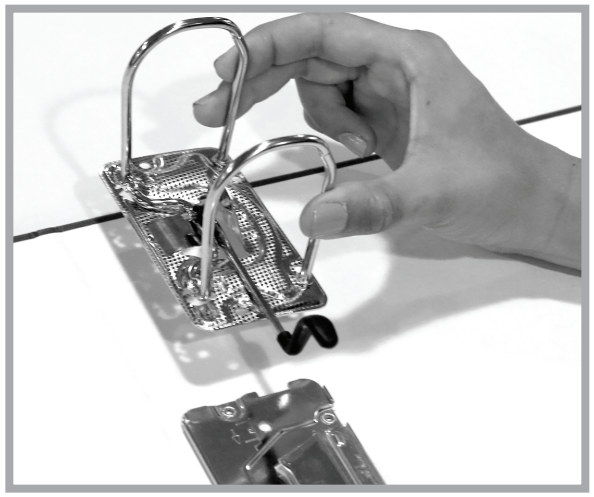

3. Continue pushing until mechanism slides free.

Installation:

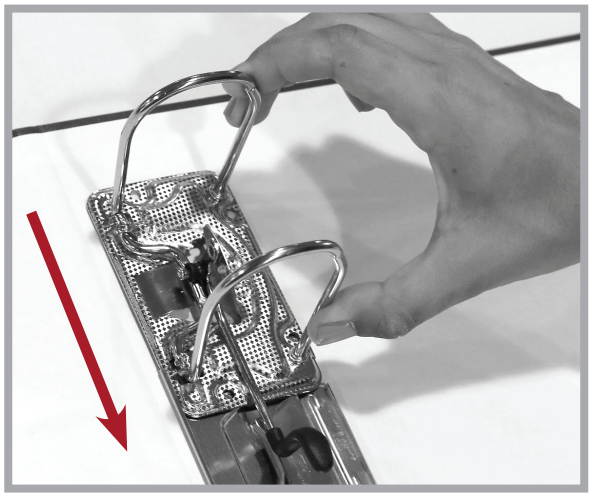

1. Slide mechanism into grooves on fixed plate (lever pointed downward as shown).

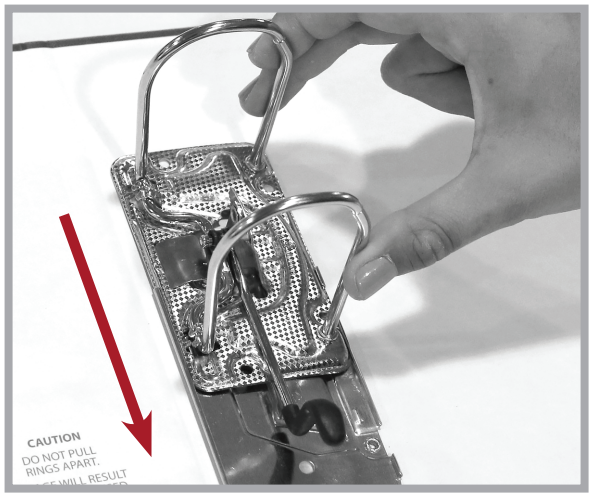

2. Firmly push mechanism over catch in direction shown.

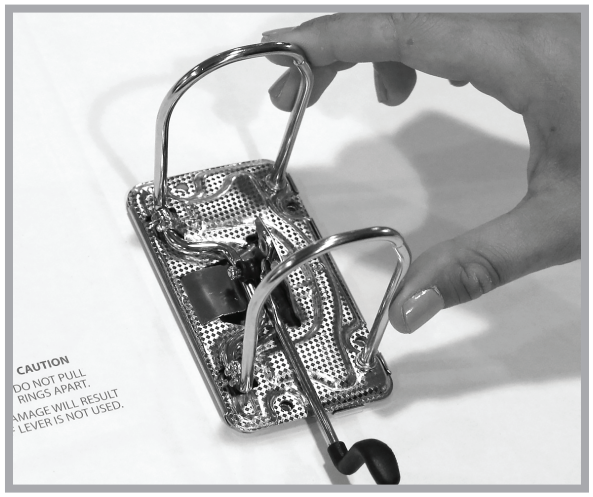

3. Continue pushing until mechanism locks into place.